
#### Installation Guide


# OrgaLED® Marker Lights - Inground

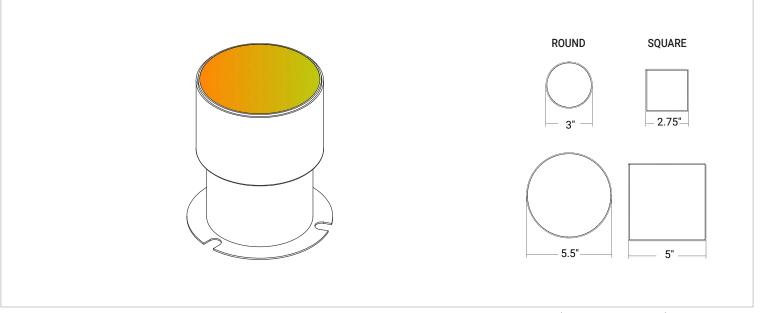





- · READ THE PROVIDED INSTRUCTIONS PRIOR TO INSTALLING.
- · INSTALLATION SHOULD BE CARRIED OUT BY QUALIFIED INSTALLERS.
- •THE INSTALLER HAS THE FINAL RESPONSIBILITY FOR THE STRENGTH AND RIGIDITY OF THE WALL/CEILING STRUCTURE.
- · A MINIMUM OF 2 PEOPLE REQUIRED WHEN INSTALLING LONG LENGTH FIXTURES.



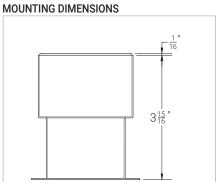

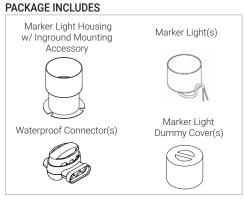



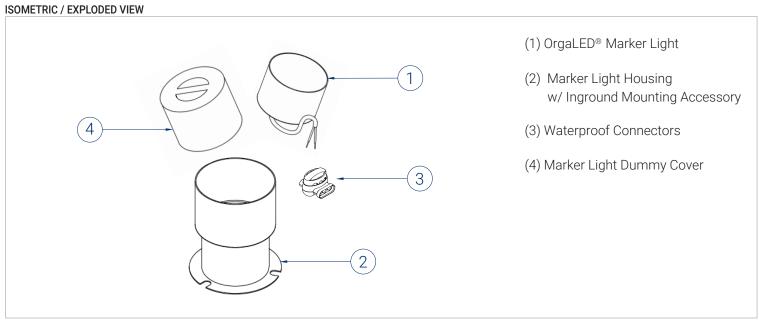


## **Mount Instructions**




## 1 USE DUMMY COVER


· SECURE AND PLACE MARKER LIGHT HOUSING IN DESIRED SURFACE. SCREW SLOTS CAN BE UTILIZED TO FURTHER SECURE AND HOLD THE MARKER LIGHT HOUSING.

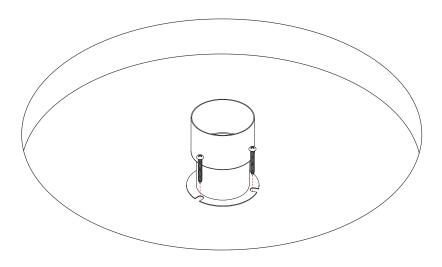

### 2 SECURE MARKER LIGHT HOUSING

· INSERT DUMMY COVER INTO MARKER LIGHT HOUSING PRIOR TO POURING CONCRETE.

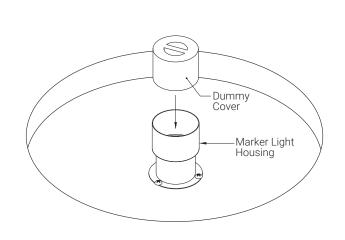

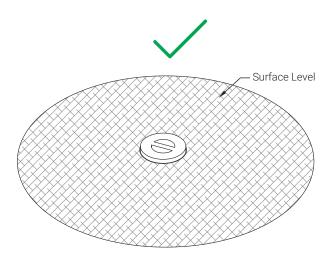


#### **Mount Instructions**




#### 3 REMOVE DUMMY COVER

· REMOVE DUMMY COVER AFTER CONCRETE IS SET.

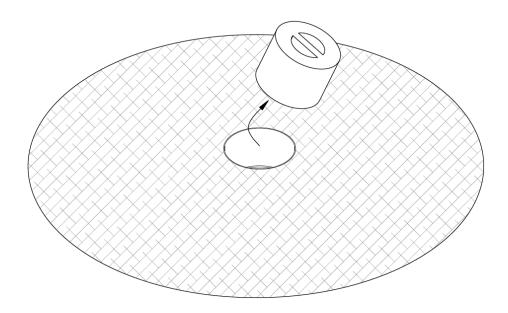

#### 4 SECURE HOUSING IN PLACE

- $\cdot$  USE WATERPROOF SPLICE CONNECTORS TO WIRE MARKER LIGHT INTO THE HOUSING.
- · CONNECTORS PROVIDE (1M, 2HRS) WATERPROOF SEALING.
- 1. INSERT 2 OR 3 UNSTRIPPED WIRES COMPLETELY INTO THE CONNECTOR AND CHECK THEIR POSITION BY LOOKING THROUGH THE TRANSLUCENT CONNECTOR BODY.
- 2. HOLD THE TOOL PERPENDICULAR TO THE WIRES AND MAKE THE CONNECTION BY DRIVING THE CAP DOWN FLUSH WITH THE TOP EDGE OF THE CONNECTOR BODY.

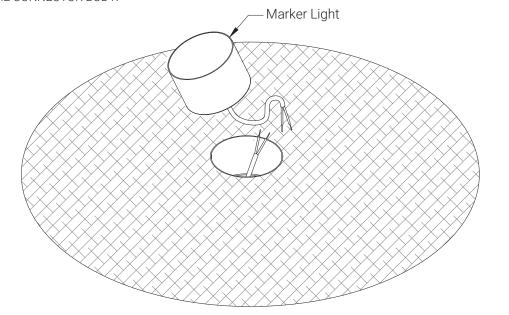




## **Mount Instructions**



## 3 SECURE INTO PLACE

· GROUT THE TRIM OF THE MARKER LIGHT TO SECURE THE MARKER LIGHT INTO PLACE.

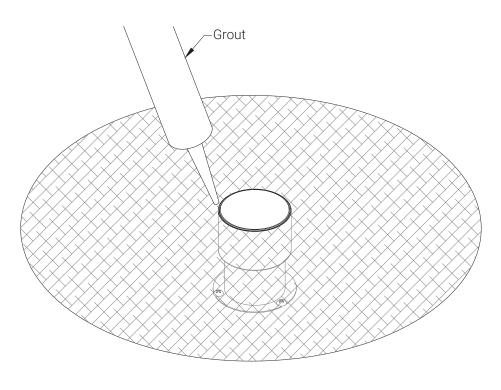

#### GRADING DETAIL

